

Models

- HH1H Hot display
- HH1C Chilled display

Models

- HH1A Ambient display
- HH1S Ambient display (low level)

Models

- HH1B Breakfast Club high unit
- HH1SB Breakfast Club low unit

Generic Parts

Part No	Description
1003G	Green Rocker switch
1741C	Cord-set
4560	Terminal block 7 Pole mains
1572	Cable gland 20mm
4599	3 Way Connector plastic type
5161	Flexible LED Lighting Strip 1400 mm long
5163	Flexible LED Lighting Strip 2000 mm long
4592B	24v LED drivers 40w
2610	M5knurled screw
5175	Clear Perspex sign
5176	White Perspex sign
4581	50mm Swivel Castor
4582	50mm Swivel/Brake Castor

Hot Display Parts

Part No	Description
5172	Happy Host- Red Sign
2806	Shelf element
1103	Thermostat
1105	Thermostat knob
3862	Rod shelf

Ambient Display Parts

Part No	Description
1044A	Panel mounted 13amp socket
5174	Happy Host- Purple Sign

Cold Display Parts

Part No	Description
5173	Happy Host blue sign
3862	Rod shelf
4932	Honeycomb
4869	Elliwel digital control
4870	Temperature sensor probe
5012	Perspex front
4867	Atex Fan (3000 RPM)
1162	Fan terminal block
4674	Small electrical connector- Plug
5008	Low Height Cubigel condenser
4583	Finned evaporator
4674A	Small electrical connector socket
4675A	Large Electrical connector- socket

Breakfast Club Parts

Part No	Description
1965A	Trolley handle
5171	Breakfast club thermo pad
0696C	Gast container 1/1 65mm
0703	Gast container 1/1 25mm
5170	Breakfast Club Cereal Dispenser
PPGAST	Polar plate



MADE IN BRITAIN

E&R Moffat Ltd.
Bonnybridge
FK4 2BS
Scotland

Find us on:



www.ermoffat.co.uk
+44 (0) 1324 812272
sales@ermoffat.co.uk